


10/10 CROSS MAG[™] USER MANUAL

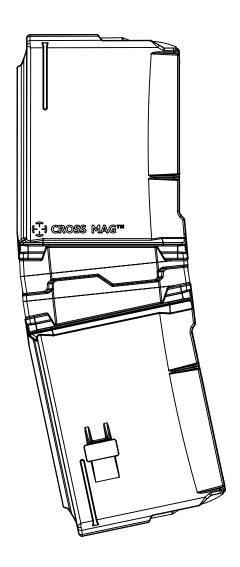

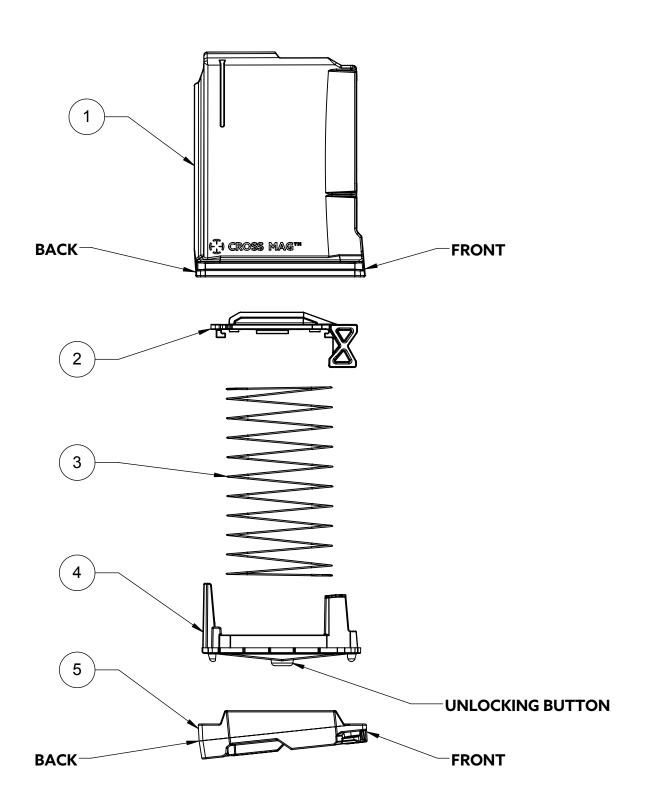


ITEM NO.	DESCRIPTION	QTY
1	BODY	1
2	FOLLOWER	1
3	SPRING	1
4	SPRING PLATE	1
5	FLOOR PLATE	1



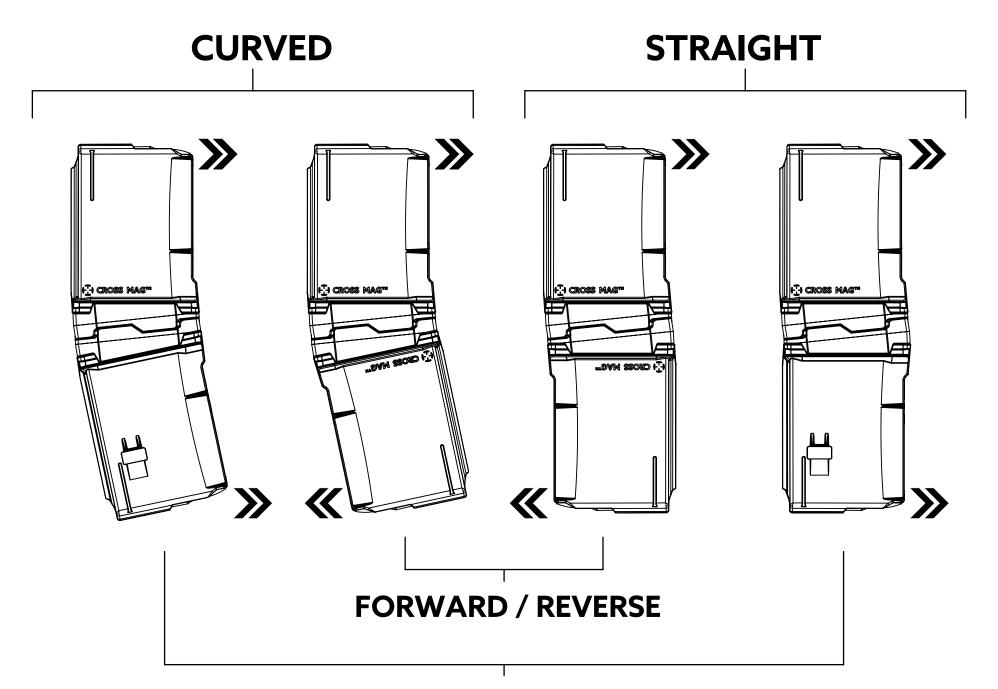

FORWARD / FORWARD



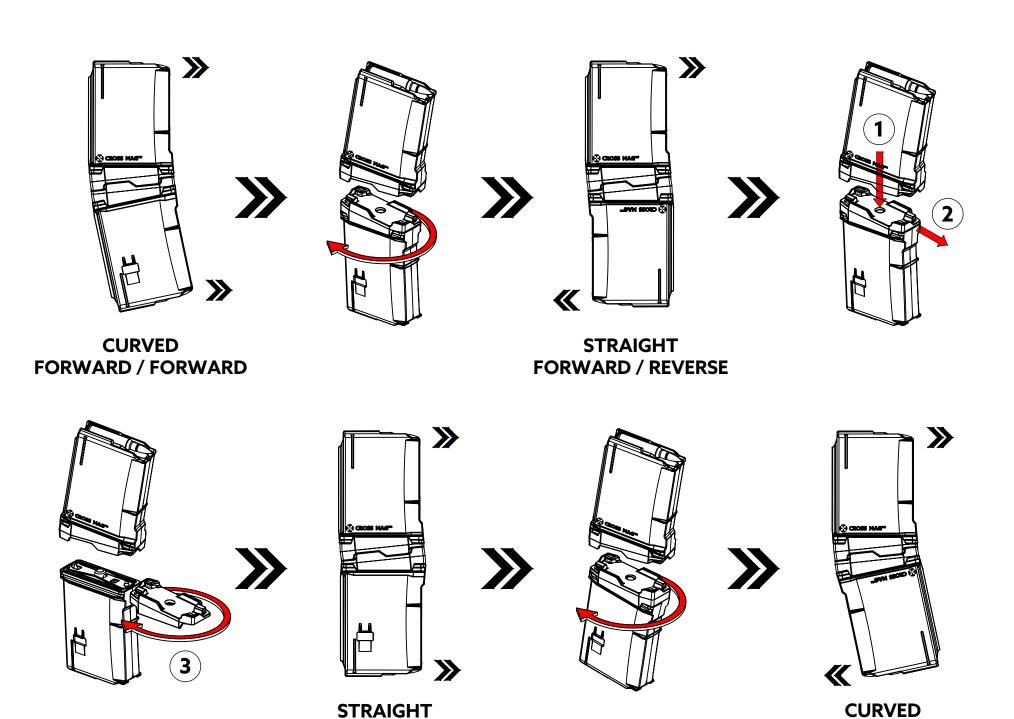

FORWARD / FORWARD
PAGE 4

CURVED FORWARD / REVERSE

UNCOUPLING THE MAGAZINES


STEP 1: Make sure BOTH end rotation stops are touching

STEP 2: Face the front of the magazines towards you

STEP 3: Put your right hand on the bottom magazine with your thumb on the same side of the magazine as your palm

STEP 4: Put your left hand on the top magazine with your thumb on the same side of the magazine as your palm

STEP 5: Use a <u>brisk</u> and <u>forceful</u> snap. You won't break them. Trying to unlock the magazines slowly requires substantially more effort than a fast and strong snap.

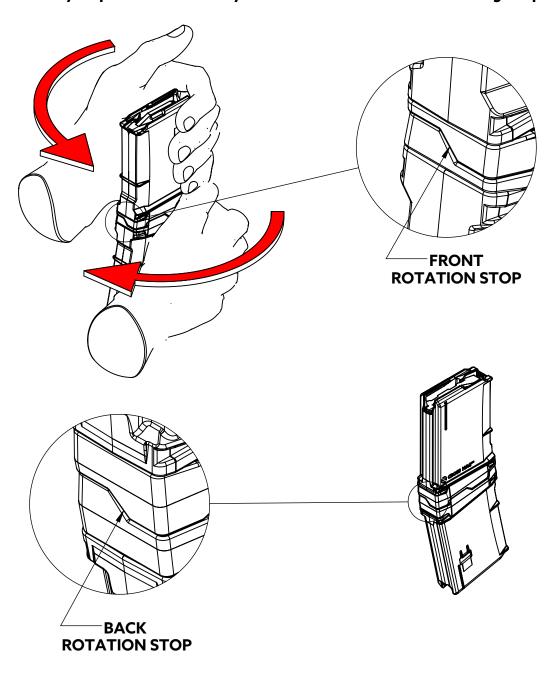


DIFFICULTY UNCOUPLING

STEP 1: Make sure the ROTATION STOPS on BOTH ends are touching (see images on page 5), half unlocked magazines are very difficult to unlock! Once you have ensured that the magzines are fully locked, follow the instructions exactly as shown on page 5.

STEP 2: Check ROTATION STOPS, MATING SURFACES and INTERLOCKS for contaminants and damage.

STEP 3: If you continue to have problems it is possible that you have contamination or damage on any of the following surfaces. Clean contamination with clean soapy water, do not use solvents. Damage can be carefully removed with a file.

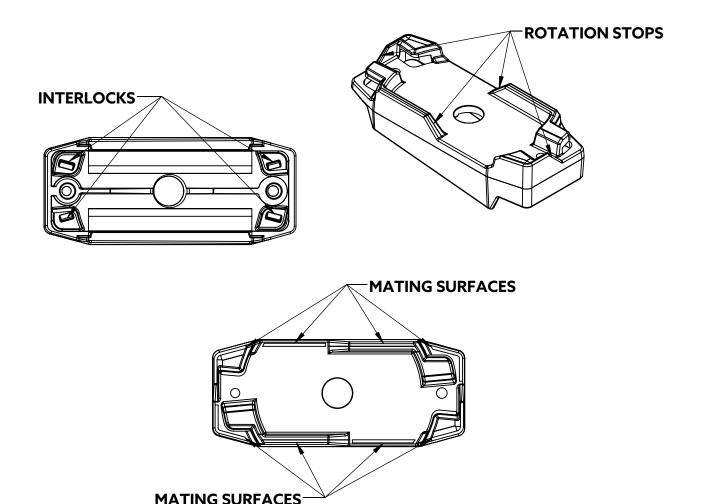

COUPLING THE MAGAZINES

STEP 1: Put your right hand on the bottom magazine with your thumb on the same side of the magazine as your palm


STEP 2: Put your left hand on the top magazine with your thumb on the same side of the magazine as your palm

STEP 3: Align magazines about the floor plates

STEP 4: Face the front of the magazines towards yourself


STEP 5: Use a brisk and forceful snap to lock the mags, an audible snap should be heard


STEP 6: Make sure BOTH end rotation stops are touching.

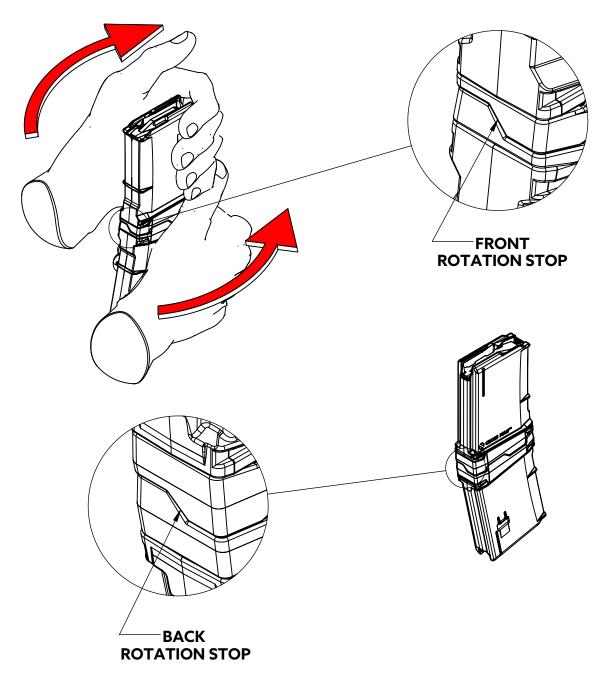

DIFFICULTY COUPLING


If you're experiencing trouble during coupling, check ROTATION STOPS, MATING SURFACES and INTERLOCKS on the floor plates for contaminants. Clean contamination with clean soapy water, do not use solvents. Damage can be carefully removed with a file. Rinse with clean water when complete and let dry.

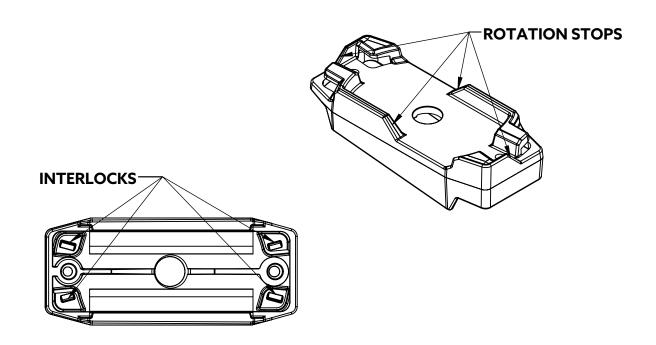

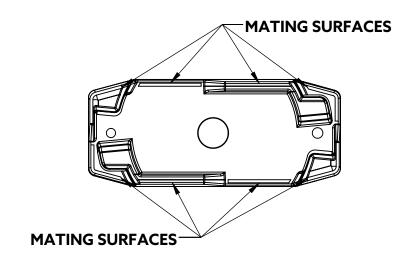


FLOOR PLATE REMOVAL INSTRUCTIONS

STEP 1: Unlock the floor plate from the mag assembly by depressing the spring plate as shown

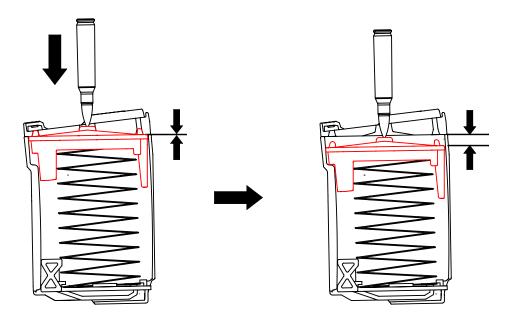


STEP 2: Slide the floor plate off the mag, ensuring the spring plate does not eject by pressing a thumb down during the removal of the floor plate.

NOTE: Make sure you point the spring plate in a safe direction, not at your face!

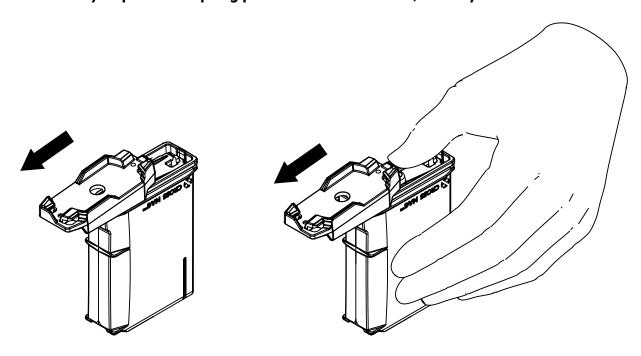



FLOOR PLATE INSTALL INSTRUCTIONS

STEP 1: Depress the spring plate into the body until it bottoms out, then slide the floor plate onto the body. Keep your thumb over top of the spring plate so that is does not eject. Point the magazine in a safe direction, not towards your face!

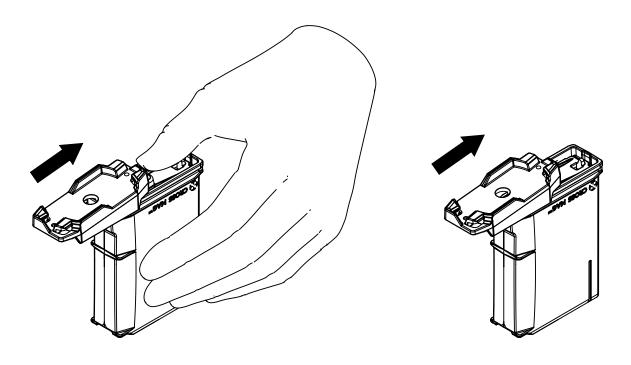

STEP 2: Fully slide the floor plate on to the mag until the spring plate and floor plate engage.

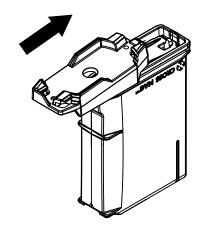

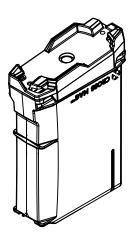


LOOSE FLOOR PLATE

The floor plate should not be able to move front or back when locked. If the floor plate is NOT fully engaged, you can press the follower down until it pushes the spring plate, which will lock the floor plate in place.

Check that the spring plate is fully engaging with the floor plate. If not, check for contaminants on all components.

NOTE: If pushing down the follower doesn't work, there may be contamination or damage to the side surfaces of the spring plate, rails of the floor plate, or rails of the body.

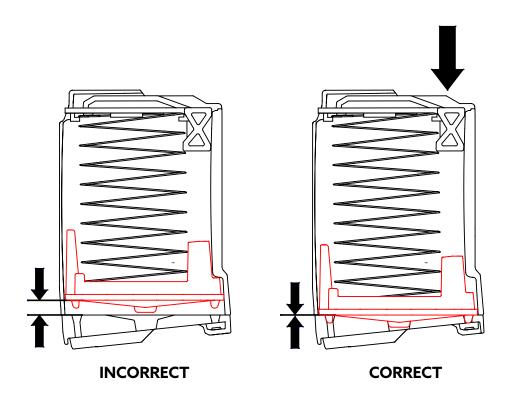

CLEANING INSTRUCTIONS

Use clean soapy water and cotton swabs. Do not use solvents. Rinse with clean water when complete and let dry.